

ENG / SLO / CRO



GREED MINI

Box Contents

1. UVI Greed Mini Mem-chanical RGB Keyboard
2. User Manual



User Manual



Navodila za uporabo



Korisnički priručnik

Instructions / Navodila / Upute

Instructions

 
Thank you for purchasing UVI Greed Mini keyboard. UVI Greed Mini is a “plug and play” keyboard with mem-chanical switches. You do not need any drivers.

Navodila

Zahvaljujemo se vam za nakup tipkovnice UVI Greed Mini. UVI Greed Mini je “plug and play” tipkovnica z membransko-mehanskimi stikali. Za uporabo ne potrebujete gonilnikov.

Upute


Hvala vam što ste kupili UVI Greed Mini tipkovnicu. UVI Greed Mini je “plug and play” tipkovnica s membransko-mehaničkim prekidačima. Za upotrebu vam nisu potrebni nikakvi upravljački programi.

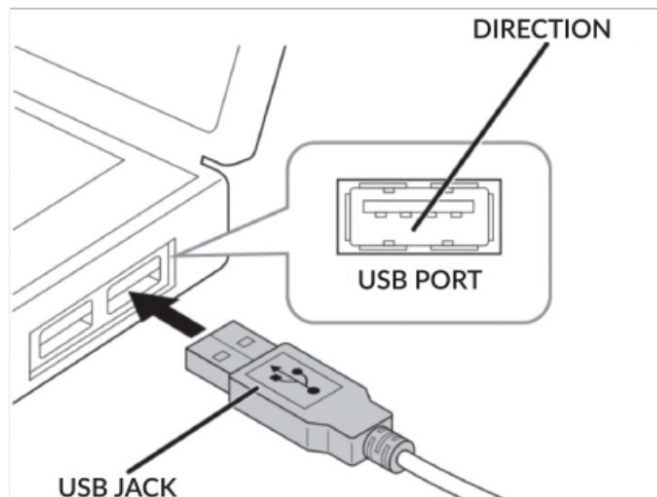


Game mode / Igralni način / Igrački način



 Lighting modes / Načini osvetlitve / Načini rasvjete

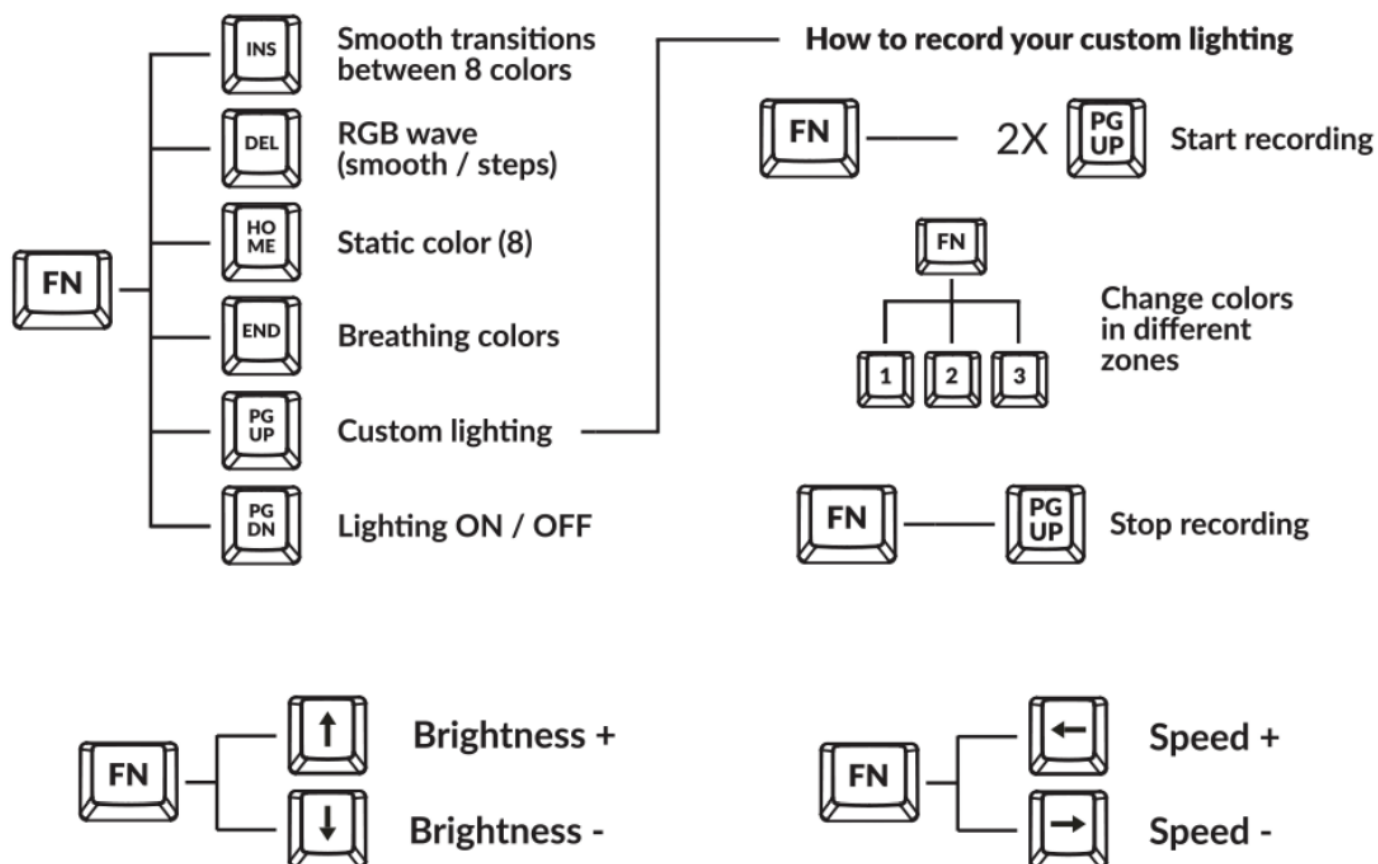

Multimedia / Multimedija / Multimedija

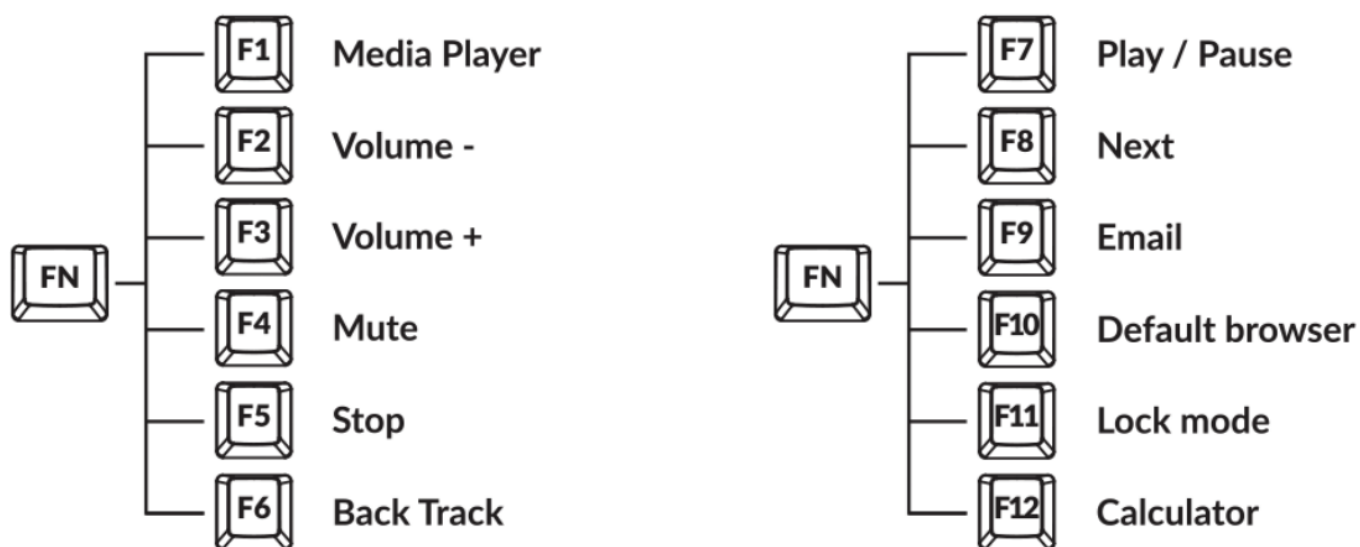 

Specifications / Specifikacije / Tehnički podaci

Technical specification

Number of keys: 88
Size: 352 × 130 × 40 mm

Polling rate: 1000 Hz
Lifetime: 8 million clicks

Switch: actuation force 45 g
Cable: nylon copper, 155 cm

Tehnične specifikacije

Število tipk: 88
Dimenzija: 352 × 130 × 40 mm

Javljena frekvenca: 1000 Hz
Življ. doba: 8 mil. klikov

Stikalo: sprožilna sila 45 g
Kabel: najlonski bakreni, 155 cm

Tehnički podaci

Broj tipki: 88
Dimenzije: 352 × 130 × 40 mm

Stopa izvještavanja: 1000 Hz
Doživotno: 8 milijuna klikova

Prekidač: sila aktiviranja 45 g
Kabel: najlonski bakreni, 155 cm

Warning / Opozorilo / Opomena

Warning

Do not attempt to open, service or modify the keyboard. Clean the keyboard using only a dry cloth; do not use alcohol or detergent. Keep away from water or fire and do not expose to high temperatures.

Opozorilo

Tipkovnice ne poskušajte odpirati, popravljati ali modificirati. Tipkovnico čistite samo z uporabo suhe krpe; ne uporabljajte alkohola ali detergenta. Izogibajte se stiku z vodo in odprtim ognjem ter je ne izpostavljajte visokim temperaturam.

Opomena

Ne pokušavajte otvarati, popravljati ili modificirati tipkovnice. Čistite tipkovnicu samo suhom krpom; ne koristite alkohol ili deterdžent. Izbjegavajte kontakt s vodom ili otvorenim plamenom i ne izlažite visokim temperaturama.

 **Thank you for choosing UVI Greed Mini.**