


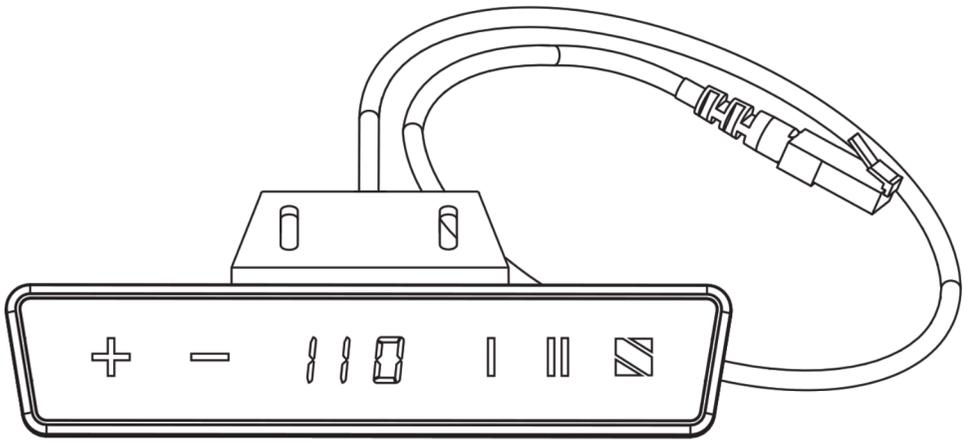

UVI LED Digital Control Panel

Assembly Guide



You can find assembly guides in other languages at:
UVI.gg/AG or via the QR code!



1

UVI LED Digital Control Panel

EN  Read the entire instruction manual before you start installation and assembly. If you have any questions regarding any of the instructions or warnings, please contact your local distributor for assistance.

- ⚠ CAUTION:** Use with products heavier than the rated weights indicated may result in instability causing possible injury.
- Please closely follow the assembly instructions. Improper installation may result in damage or serious personal injury.
 - Safety gear and proper tools must be used. This product should only be installed by professionals.
 - Ensure that the supporting surface will safely support the combined weight of the equipment and all attached hardware and components.
 - Use the mounting screws provided and DO NOT OVERTIGHTEN mounting screws.
 - This product contains small items that could be a choking hazard if swallowed. Keep these items away from children.
 - This product is intended for indoor use only. Using this product outdoors could lead to product failure and personal injury.
- IMPORTANT:** Ensure that you have received all parts according to the component checklist prior to installation. If any parts are missing or faulty, contact your place of purchase for a replacement.
- MAINTENANCE:** Check that the product is secure and safe to use at regular intervals (at least every three months).

SLO  Pred sestavo in montažo preberite celotni vodič za sestavo. Če imate kakršnakoli vprašanja glede navodil ali pa opozoril, prosimo kontaktirajte vašega lokalnega distributerja za pomoč.

- ⚠ PREVIDNO:** Uporaba izdelka z večjimi težami kot pa so predpisane lahko povzroči nestabilnost in resne telesne poškodbe.
- Nosilci morajo biti pritrjeni kot je navedeno v navodilih za sestavo. Nepravilna montaža lahko povzroči škodo ali resno telesno poškodbo.
 - Uporabljen mora biti varnostna zaščita in pravilna orodja. Ta izdelek lahko namesti samo profesionalno oseboje.
 - Prepričajte se, da bo podporna površina prenesla vso težo opreme in vso povezano strojno opremo in druge komponente.
 - Uporabite nosilne vijake, ki so že v paketu in vijake NE PRIVIJTE PREVEČ.
 - Izdelek vsebuje majhne predmete, ki lahko predstavljajo nevarnost zadušitve. Držite te predmete stran od otrok.
 - Izdelek je namenjen samo notranji uporabi. Uporaba izdelka zunaj lahko privede do kvrčenja izdelka ali pa do telesne poškodbe.
- POMEMBNO:** Prepričajte se, da ste v paketu prejeli vse dele glede na kontrolni seznam predmetov. Če kakšni deli manjkajo ali pa so poškodovani, stopite v stik z vašim lokalnim distributerjem za zamenjavo.
- VZDRŽEVANJE:** Preverite varnost okvirja v rednih intervalih (vsaj vsake tri mesece).
- Slovenska navodila lahko najdete na spletni strani UVIDesk.com/AG.**

HR  Prije montaže pročitajte cjeloviti vodič za montažu. Ako imate bilo kakvih pitanja u vezi s uputama ili upozorenjima se za pomoć obratite lokalnom distributeru.

- ⚠ OPREZ:** Korištenje proizvoda većim od propisane težine može uzrokovati nestabilnost i ozbiljne ozljede.
- Nosaji moraju biti učvršćeni kako je naznačeno u uputama u putama za montažu. Nepravilna montaža može uzrokovati oštećenja ili ozbiljne ozljede.
 - Mora se koristiti sigurnosna zaštita i pravi alati. Ovaj proizvod smije instalirati samo profesionalno osoblje.
 - Osigurajte da će noseća površina nositi svu težinu opreme i sav hardver i ostale komponente.
 - Upotrijebite pričvršne vijake koji su već u pakiranju i vijake ne PRITEGNITE PREVIŠE.
 - Proizvod sadrži male predmete koji mogu predstavljati opasnost od gušenja. Držite te predmete dalje od djece.
 - Ovaj je proizvod namijenjen samo za internu upotrebu. Korištenje proizvoda izvana može dovesti do oštećenja proizvoda ili ozljede.
- VAŽNO:** Provjerite jesu li svi predmeti u pakiranju prema popisu predmeta. Ako neki dijelovi nedostaju ili su oštećeni, obratite se lokalnom distributeru za zamjenu.
- ODRŽAVANJE:** Provjerite sigurnost okvira u redovitim intervalima (najmanje svaka tri mjeseca).
- Hrvatske upute možete pronaći na web stranici UVIDesk.com/AG.**

DE  Bitte vor Beginn der Montage und Zusammenbau das ganze Handbuch durchlesen. Bitte sich mit dem Händler vor Ort bei Fragen zur Anleitung oder Warnungen in Verbindung setzen.


- ⚠ VORSICHT:** Bei Verwendung mit Produkten, die das zulässige Gewicht überschreiten, können Schaden oder möglicherweise Verletzungen die Folge sein.
- Halterungen sollen entsprechend den Montageanweisungen angebracht werden. Eine unsachgemäße Montage kann Schäden oder Verletzungen zur Folge haben.
 - Sicherheitsausrüstung und geeignete Werkzeuge verwenden. Die Montage des Produktes sollte nur von Fachleuten durchgeführt werden.
 - Die tragenden Oberflächen sollten das gesamte Gewicht von Geräten und allen zusätzlichen Bauteilen sicher aushalten können.
 - Nur die mitgelieferten Einbauschrauben verwenden und die Schrauben NIGHT ZU FEST ANZIEHEN.
 - Dieses Produkt enthält Kleinteile, die Erststckungsgefahr beim Verschlucken hervorrufen können. Diese Teile von Kindern fernhalten.
 - Dieses Produkt nur in Innenräumen verwenden. Verwendung des Produktes im Außenbereich kann zu Verletzungen und Schäden führen.
- WICHTIG:** Vor der Montage bitte alle erhaltenen Bauteile mit der Bauteileliste abgleichen. Bei beschädigten oder fehlenden Teilen den Händler vor Ort nach Ersatzteilen fragen.
- WARTUNG:** Die Haltemngsklammer regelmäßig auf Sicherheit und Stabilität prüfen (am besten alle drei Monate).

FR  Lisez entièrement le guide d'utilisateur avant de commencer l'installation et le montage. Si vous avez des questions concernant les instructions ou les avertissements, veuillez contacter votre distributeur local pour une assistance.

- ⚠ ATTENTION:** L'utilisation de produits plus lourds que les poids nominaux indiqués peut entraîner une instabilité causant des blessures potentielles.
- Les supports doivent être joints comme spécifié dans les instructions de montage. Une mauvaise installation peut entraîner des dommages ou de graves blessures aux personnes.
 - Un équipement de sécurité et les outils appropriés doivent être utilisés. Ce produit devrait être installé uniquement par des professionnels.
 - Assurez-vous que la surface de soutien supporte en sécurité le poids combiné de l'équipement et de tous les matériaux et composants associés.
 - Utilisez les vis de montage fournies et NE SERREZ PAS TROP LES vis de montage.
 - Ce produit contient de petites pièces qui peuvent causer un étouffement si elles sont avalées. Éloignez ces pièces des enfants.
 - Ce produit est prévu uniquement pour une utilisation à l'intérieur. L'utilisation de ce produit à l'extérieur peut entraîner une défaillance du produit ou des blessures aux personnes.

IMPORTANT: Avant l'installation, assurez-vous que vous avez reçu toutes les pièces selon la liste de vérification des composants. Si une pièce est manquante ou endommagée, téléphonez à votre distributeur local pour qu'il la remplace.

MAINTENANCE: A intervalles réguliers (au moins tous les trois mois) vérifiez que le support est d'utilisation sûre et fiable.

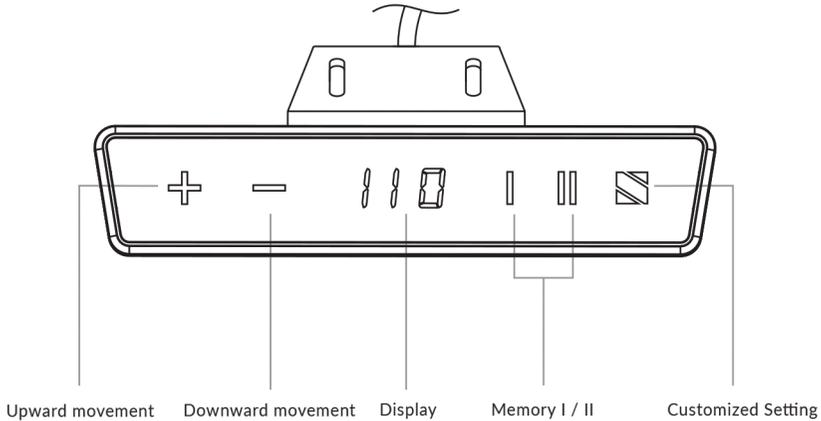

Operation Instruction:

Note: Before using the desk for the first time, you will need to reset the system.

Resetting the system:

- Press and hold the down “-” button until the desk moves downward to a lower position. Release the button.
- Press and hold the down “-” button again for approximately 5 seconds. “000” will display on display and the desk will move further downward.
- Release the button when the current desk height is displayed.
- With this, the reset process is finished.

Height Adjustment:

- Press and hold the up “+” and down “-” button to lift or lower the desk to your desired height.

Customize Min. & Max. Height Limits:

- Once you see the Min. & Max. Height Limits, the desk will move within the limited height range.
- To set a Min. & Max. Height limit, move the desk to your desired height, then press and hold the “+” and “-” buttons for approximately 5 seconds. The unit will emit a beep. With that, the setting is finished.
- To remove the Min. & Max. Height Limit, move the desk to the previously set min. / max. height then press and hold “+” and “-” buttons for approximately 5 seconds. The unit will emit a beep. You have removed the limit.

Note: The min. adjustable range is the lower half of the initial height adjustable range. The max. adjustable range is the upper half of the adjustable range.

Customize Memory Settings:

- To store a height setting to the memory, set the desk to the desired position, then press the ▧ button. After holding down the button you will see a “S-” displayed. After that, press “I” or “II” to save the height.
- If you want to adjust the height to a stored position, press the “I” or “II” button. The desk will automatically move to the stored height.

Customizing the Child Lock Function:

- To lock the screen, hold and press buttons “▧” and “+” together until “Loc” is displayed.
- To unlock the screen, hold and press buttons “▧” and “-” until the current height is displayed.

Follow the procedures below to adjust desk functions:

- Press and hold the “” button until the display flashes “S-X”. (“X” represents the setting number)
- Press “+” or “-” to switch from “S-1” to “S-5”. Each code corresponds with a preset setting.
- Press “” button to customize the desired setting.

Changing between CM and INCHES (S-1)

- Press and hold the “” button, then press “+” until you see “S-1” on the display. Press “” button again, then press “+” or “-” buttons.
- “0” indicates the metric system (CM) whereas “1” indicates the imperial system (INCHES).
- Press “” button again to save.

Collision avoidance settings (GYRO senses abnormal motion / CURRENT sense impact)***S-2: Adjusting the overall sensitivity of the GYRO**

- Press and hold the “” button. then press “+” until you see “S-2” flashing on the display. Pres “” again then use “+” and “-” buttons to adjust the sensitivity from level 1 to 8.
- The higher the sensitivity setting, the more sensitive the unit is.
- If you want to turn the anti-collision protection OFF select “0”.

***S-3: Adjusting the UPWARD anti-collision sensitivity (CURRENT sensor)**

- Press and hold the “” button, then press “+” until you see “S-3” flashing on display. Pres “” again then use “+” and “-” buttons to adjust the sensitivity from level 1 to 8.
- The higher the sensitivity setting, the more sensitive the unit is.
- If you want to turn the anti-collision protection OFF select “0”.

***S-4: Adjusting the DOWNWARD anti-collision sensitivity (CURRENT sensor)**

- Press and hold the “” button, then press “+” until you see “S-4” flashing on display. Press “” again then use “+” and “-” buttons to adjust the sensitivity from level 1 to 8.
- The higher the sensitivity setting, the more sensitive the unit is.
- If you want to turn the anti-collision protection OFF select “0”.

***S-5: Changing the display height (adding desktop thickness to the displayed height)**

- Reset the system.
- Measure the actual height (including desktop) of the desk.
- Change the current display height by pressing and holding button “”. Then press “+” until you see “S-5” flashing on the display. Press “” button and then press “+” or “-” to set the current height.

Note: the default height can only be shown in a METRIC system (CM).

Remove all customized settings

- Press and hold “+” and “-” buttons together for approximately 10 seconds until you hear a long beep and “000” is displayed. Then release the buttons.
- Press and hold the “-” button until the desk moves downward to a lower position and the current desk height is displayed.
- The process is finished. All custom settings have been erased.

Desk does not move up or down:

Possible Reasons	Solution
Power cable is unplugged	Re-insert the power cable into the control box
Columns are disconnected	Reinsert the motor cable into the control box
Poor connection	Check all connections
Broken control box	Replace the control box
Broken control panel	Replace the control panel

Column moves in only one direction

Possible Reasons	Solution
Power breakdown or power is unplugged	Reset the system
Broken control box	Replace the control box
Broken control panel	Replace the control panel
Broken column	Replace the column

Control Box or Control Panel is not working

Possible Reasons	Solution
Power cable or control panel in unplugged	Re-insert the power cable
Broken control box, power cable or control panel	Replace the broken part
Control panel got wet	Replace control panel
Poor connection	Check all connections

Error Code Troubleshooting

Error Code	Possible Reasons	Solution
H0T	Thermal protection has occurred	Stop operation and allow your desk to cooldown for approx. 20 minutes.
E01	Overvoltage	Reinsert the power cable. If the problem persists, replace the control box.
E02	Column problems	Reset the system.
E03	Control panel is disconnected	Reinsert the cable between control panel and control box.
- - -	Collision avoidance system has activated	Remove all objects within the range of motion.
E06/E07	Voltage too low	Reinsert the power cable. If the problem still exists, replace the control box.
E08	The control box is out of position	Make sure that control box is attached to the desk frame then reset the system.
	The power cords have pulled the control box	Make sure that the cables are not pulled from the control box.
	Collision avoidance system has activated	Remove all surrounding items and reset the system.
E11/E21	The motor cords were disconnected. (E11 corresponds to M1 connector while E21 corresponds to M2 connector)	Reinsert the motor cords into the control box. If the problem still exists, replace the motor cords or columns.
E12/E22	An electrical problem has occurred (E12 corresponds to M1 connector while E22 corresponds to M2 connector)	Reinsert the power cable. If the problem still exists, replace the control box.
E13/E23	The motor cords were disconnected. (E13 corresponds to M1 connector while E23 corresponds to M2 connector)	Replace the motor cords or columns.
E14/E24	An electrical problem has occurred (E14 corresponds to M1 connector while E24 corresponds to M2 connector)	Unplug and reinsert the motor cords into the control box. if the problem still exists, replace the motor cords or columns.
E15/E25	The motor cords were disconnected. (E15 corresponds to M1 connector while E25 corresponds to M2 connector)	Replace the motors or columns.

Error Code Troubleshooting

Error Code	Possible Reasons	Solution
E16/E26	Overload (E16 corresponds to M1 connector while E26 corresponds to M2 connector)	Remove the items from the desktop then reset the system.
E17/E27	Desk moves in a wrong direction (E17 corresponds to M1 connector while E27 corresponds to M2 connector)	Replace the motor cords or columns.
E18/E28	Desk moves in a wrong direction (E13 corresponds to M1 connector while E23 corresponds to M2 connector)	Remove the items from the desktop
E41/E42/E43	Broken control box	Replace the control box.